

RGU-3645 LOCK ASSEMBLY REPL KIT

Locking Mechanism Installation Instructions

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|------------------------------|------|
| 1 | 45-RGU-H1 | Lock Assembly: Quarter turn | 1 |
| 2 | 45-RGU-H2 | Finger Pull, Stainless Steel | 1 |
| 3 | 99-RGU-001 | Door Rod and Cam Assembly | 1 |

INSTRUCTIONS

STEP 1. REMOVE THE EXISTING LOCKING MECHANISM COMPONENTS FROM THE DOOR, IF APPLICABLE.

STEP 2. SEPARATE THE LOCK ASSEMBLY COMPONENTS AS NECESSARY AND REASSEMBLE WITH THE FINGER PULL, AS SHOWN IN DETAIL A.

BE SURE TO NOTE:

- THE ORIENTATION OF THE KEYWAY ON THE LOCK

STEP 3. INSTALL THE DOOR ROD ASSEMBLY BY INSERTING:

- THE LONGER ROD THROUGH THE UPPER BRACKET
- THE SHORTER ROD THROUGH THE LOWER BRACKET

STEP 4. ALIGN THE CENTER SQUARE HOLE OF THE DOOR ROD ASSEMBLY WITH CENTER OF SQUARE LOCK ASSEMBLY AND FASTEN USING SCREW PROVIDED.

BE SURE TO NOTE:

- THE POSITION OF THE ROTATION LIMITER.

RECOMMENDED: APPLY LOCTITE TO THE SCREW TO HELP PREVENT LOOSENING OVER TIME.

